WT727Q
WT725Q
WT657Q
WT655Q

Washing Machine

user manual

imagine the possibilities

Thank you for purchasing this Samsung product. To receive a more complete service, please register your product at

www.samsung.com/register

SAMSUNG

[INDUS2]WT727-03218A_EN.indd 1 2012-07-11 2:42:06

contents

FEATURES 2
SAFETY INSTRUCTIONS 2
cautions 2
precautions when operating 3
DESCRIPTION OF PARTS 4
CONTROL PANEL 5
INSTALLATION 6
Environment 6
Connecting the inlet hose 6
CLEANING THE MACHINE. 6
Cleaning the lint lter 6
Cleaning the wash tub 6
WASHING PROCEDURE 6
Washing 6
Spinning dry 7
Rinsing 7
Over ow rinse 8
Additional rinse 8
LAUNDRY GUIDE 8
MAINTENANCE 9
TROUBLESHOOTING. 9
SPECIFICATIONS 9

Instruction about the WEEE mark

Correct Disposal of This Product (Waste Electrical & Electronic Equipment)

This marking on the product, accessories or literature indicates that the product and its electronic accessories should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

For more information on safe disposal and recycling visit our website www.samsung.com or contact our Helpline numbers - 1800 1100 11, 3030 8282, 1800 3000 8282, 1800 266 8282

features

- **Double Storm Pulsator (option)**
  - By rotating an inner and outer blade at different speeds, two powerful currents of water created that ensure that clothes get clean with less damage than a conventional washing machine. The Double Storm like water currents enhance both washing and rinsing power while reducing unnecessary fractions and in creating both the durability and reliability of your ne fabrics by preventing the laundry from getting twisted and knotted.
- **Air turbo Drying system**
  - Air Turbo technology spins hard and fast so you can spend less time drying.
  - Time Saving AIR TURBO saves your time, ensuring your clothes are dried 30% ~ 40% faster than line drying alone. Especially during the rainy season and in high-humid weather, laundry that once took days to drip-dry, such as heavy jeans, bulky sweaters, and thick blankets are dried more rapidly.
- **Transparent Window (option)**
  - This Transparent Window is the new concept to solve the curiosity of users to see inside of washing machine while operation. While operation, the laundry progress inside of washing machine can be checked by looking through the transparent window.

safety instructions

- Must follow the cautions and preactions for safety intend to prevent unpredictable danger and damage by helping the proper use in safety.

cautions



- **Be sure that the washing machine is grounded.**
  To avoid electrical shock, use a metal pipe for the ground connection. But, don't ground the washing machine with gas pipes or telephone lines to avoid to dangers of explosion or lightning strike.

- **Do not put your hands into the spin dryer basket when it is spinning.**
  Your ngers can be caught by spinning laundry and damaged.

- **Never allow children to operate or play with the washing machine.**
  Children playing with the washing machine may accidentally fall into the washing tub.
- **Do not climb up the Washing Machine or lid (Ez wash tray or spin dryer lid)**

[INDUS2]WT727-03218A_EN.indd 2 2012-07-11 02:42:07

- **Must follow the cautions below when the washing machine is working.**
  If the EZ WASH TRAY is slided from side to side, the EZ WASH TRAY is fallen out of washing-machine's top in wash-tub.

- **Disconnect the power cord from the power supply when not in use.**
- **Ventilation opening must not be obstructed by carpeting when the washing machine is installed on a carpeted floor.**
- **If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.**
- **To avoid overfilling and damages this appliance must be filled with the operator present using a moderate water supply pressure only.**
- **For washing machines with ventilation openings in the base, that a carpet must not obstruct the openings.**
- **Do not use adapter or extension cord to supply power to your washing machine.**
- **This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.**

⚠ precautions when operating

- **Don't use excessively hot water. (50°C or more)**
  Plastic parts may be deformed or damaged. Also, clothing may be deformed or decolored.
- **Before washing,check all pockets.**
  If nails or pins remain in pockets, they may damage the washing machine or clothes.
- **Close the water tap a little if the water pressure is too high.**
- **To avoid water splashes, close the wash tub lid.**
- **Never splash water on the control panel.**
- Take out personal belongings from pockets.



CAUTION Check the pockets! Hairpins and coins cause damages to clothes and washing machine. They make noise and problems to the machine. Must check the pocket.

- **Put only washing cloths on EZ WASH TRAY.**
  Heavy cloths & thing not to be kept.

- **Don't use the EZ WASH TRAY as a washboard.**

- **Don't put candle & Hot Things on washing machine.**

- **Be able to hang the EZ WASH TRAY on the side hook, while operating the Washing Machine or not.**

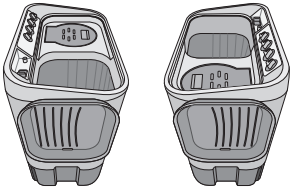

- **Be sure to cover with the inner cover on laundry before spinning.**
  This prevents laundry from being tossed out and damaged.

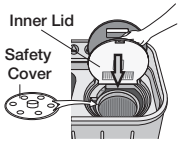

- **Be sure lay the drain hose(A) down.**



- **Heavy laundry or loads on EZ WASH TRAY may make it buckle and fall out of washing machine.**
  Do not overload EZ WASH TRAY.
- **Don't pull off the Knobs. Knobs can't take off from outside of the Panel.**

[INDUS2]WT727-03218A_EN.indd 3 2012-07-11 2:42:09

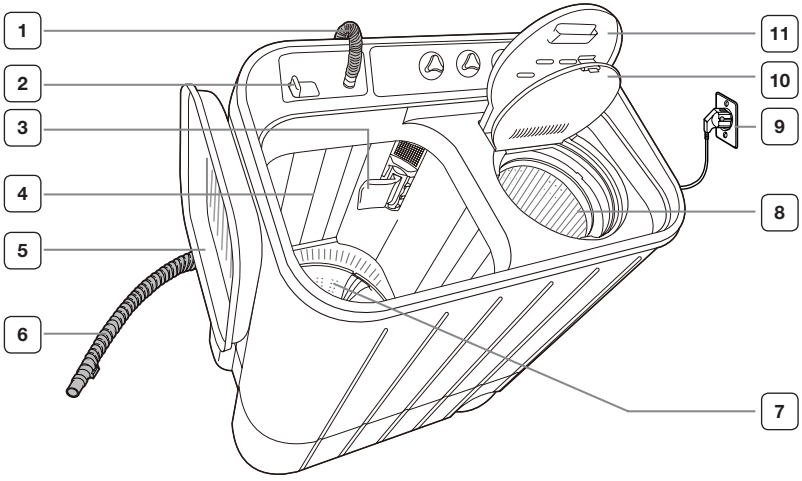

1	**INLET HOSE**
2	**LEVER RINSE SELECTOR**
3	**LINT FILTER**
4	**WASH TUB**
5	**WASH TUB LID (EZ WASH TRAY)** Be sure to keep the lid closed during washing and spinning.
6	**WATER DRAIN HOSE**
7	**PULSATOR**
8	**SPIN DRYER BASKET**
9	**POWER CORD** The plug's shape may not correspond with this drawing.
10	**INNER LID**
11	**SPIN DRYER LID** When you open this lid while the spin basket is spinning, the spinning will be stopped by brake system.

[INDUS2]WT727-03218A_EN.indd 4 2012-07-11 2:42:10

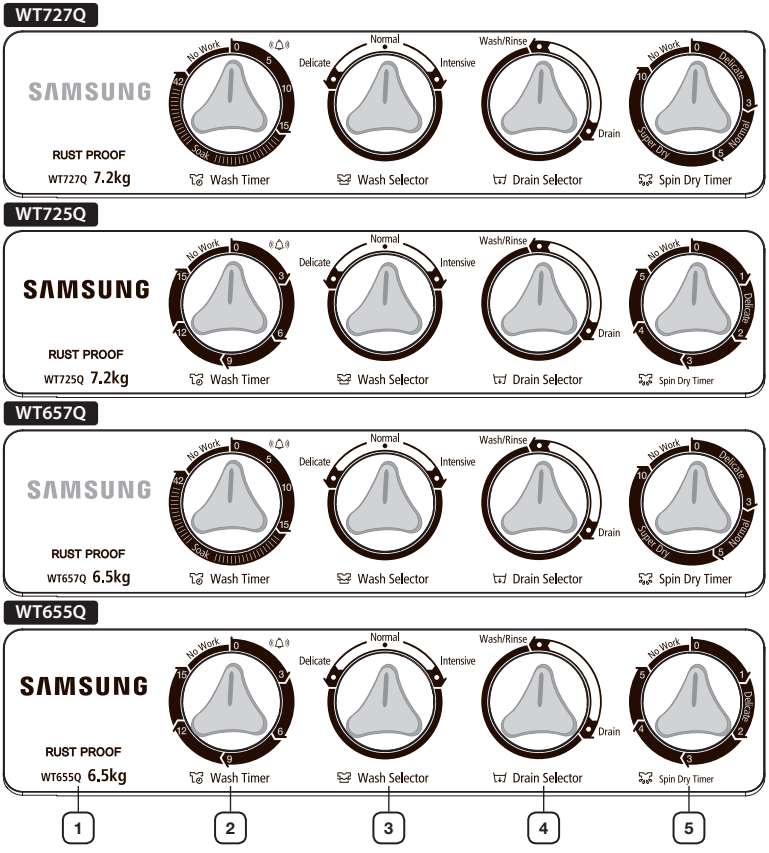

1	**TOP-COVER, BODY & BASE ARE 'RUST PROOF'**	No metal frame used. Free from rust.
2	**WASH TIMER**	This is used to set the wash time, 1-15 minutes (option) 1-42 minutes (option)
3	**WASH SELECTOR**	This is used to select wash action.
4	**DRAIN SELECTOR**	This is used to select the Washing / Rinsing or draining.
5	**SPIN DRY TIMER**	This is used to set the spin time, 1-5 minutes (option) 1-10 minutes (option)
	*** WATER SELECTOR**	During washing, LEVER RINSE SELECTOR should be selected to wash. During spin rinsing, WATER SELECTOR KNOB should be selected to spin.

[INDUS2]WT727-03218A_EN.indd 5 2012-07-11 2:42:11

installation

Environment

- **How to move the machine.**
  Wheels are provided for easy translocation of machine.
  - Hold the machine firmly as shown in the figure below.

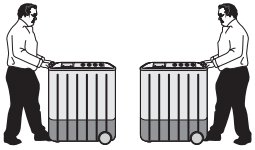

Do not move machine when it is loaded.

- **Leave some space.**
  Space at last 15 cm between the washing machine and the wall.
- **Place the washing machine on a sturdy flat surface.**
  If the washing machine is placed on an uneven or weak surface, noise or vibration may be occured. (Allowable is 2°)
- **Never install the washing machine near water.**
  Do not place the washing machine in steamy rooms or where the washing machine is directly exposed to rain. Moisture may destroy the electrical insulation and cause an electrical shock hazard.
- **Avoid direct sunlight or heating devices.**
  As plastic and electrical components are affected by direct heat, never place the washing machine near heaters, boilers,etc. Do not place under direct sunlight.

Connecting the drain hose

Insert the drain hose(a) and push it tighly to be connected as arrow direction.

- Push it with force further to the bottom of the drain outlet
- Check the drain hose for not getting apart from the outlet by drawing it.

Connecting the inlet hose



(Insert the inlet hose into washing machine) **(Insert the inlet hose into faucet)**

cleaning the machine

Cleaning the lint filter

If the dregs are filled up in the lint filter after finishing the wash, push down(1) and pull it out(2) as shown in figure.
Remove the collected lint and rinse the filter net.

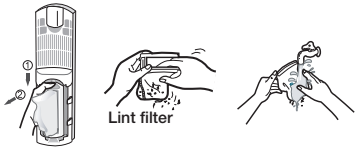

Cleaning the wash tub

Wipe off strains on the cabinet and operation panel with soft cloth.
Do not use benzene, thinners, cleanser, or wax, nor scrub the washing machine with a brush. Painted surfaces or plastic parts will be damaged.

washing procedure

Washing

1. Before starting washing, check the following;
  - Connect the water inlet hose and open the water tap.
  - Connect the power cord to the power supply outlet.
  - Lay the drain hose(A) down toward a sinkhole.



2. Set the WASH SELECTOR KNOB to the desired mode.

3. Set the DRAIN SELECTOR KNOB to 'WASH.RINSE'.

[INDUS2]WT727-03218A_EN.indd 6 2012-07-11 2:42:12

4. Set the LEVER RINSE SELECTOR to WASH.

5. Load laundry in the wash tub.

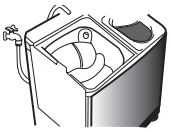

6. Fill water in the wash tub and add the detergent.

7. Set the WASH TIMER.

Set the Wash Timer 1-15 min. (option)
Set the Wash Timer 1-42 min. (option)
(Set the Wash Timer to a point between 15 to 42 mins for soak function).

SOAK FUNCTION(option)

If the WASH TIMER is set to a point between “15” to “42”, the washing machine start the wash (15 min), after the soak (26.5 min) is completed.
The Soak function (26.5 min) repeats the cycle that is 1.5-2.0 min on washing.
Turning and the 5 min Resting (4 times).

8. After washing,set the DRAIN SELECTOR KNOB to ‘DRAIN’ for drain.

Spinning dry

1. Transfer the clothes into the spin basket and arrange the clothes evenly.

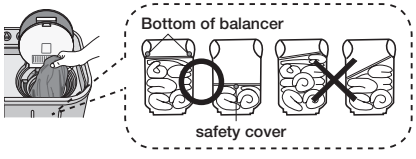

2. Be sure to attach the safety cover and close the inner lid.

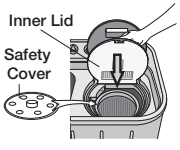

3. Close the spin dryer lid.



4. Set the SPIN DRYER TIMER 1-10 minutes.

1-5 min Spin Dry Timer (option)

1-10 min Spin Dry Timer (option)

5. Incomplete spining.(Severe vibration or unbalance) See “When you load ...”on page 9.

Rinsing

1. Set the DRAIN SELECTOR KNOB to ‘WASH RINSE’.

2. Supply the proper amount of water as not to overflow the top of the washing tub.
3. Set the WASH TIMER 2~3 minutes.

4. Drain the water.Set the DRAIN SELECTOR KNOB to ‘DRAIN’.

5. Repeat this cycle until drain water is clean. (2~3 cycles)
6. Be sure lay the drain hose down.

[INDUS2]WT727-03218A_EN.indd 7 2012-07-11 2:42:15

Over flow rinse

1. Keep suppling water.

Adjust water pressure to ensure that the amount of water supplied does not exceed that water drained.

2. Set the WASH TIMER 6~8 minutes.

3. As soon as the WASH TIMER shuts off, turn off the water tap.

4. Set the DRAIN SELECTOR KNOB to 'DRAIN'.

Additional rinse

After rinsing you can select this course for more effective rinse (Don't select only this course for rinse.)

1. Load the laundry evenly into the spin basket.

2. Set the LEVER RINSE SELECTOR to SPIN(a) and DRAIN SELECTOR KNOB to 'DRAIN(b)'.



3. Supply water for about 1minute. Adjust the water flow to prevent overflow from the wash tub.

4. After stopping water supply, cover the laundry with safety cover and close the inner lid.

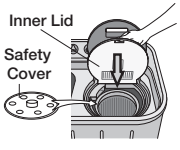

5. Close the spin dryer lid.



6. Set the SPIN DRY TIMER 2~3 minutes.

laundry guide

Washing time

Kinds of clothing	Washing time	Washing Selection
Extremely soiled heavy fabric	10 to15 minutes	INTENSIVE
Linen,cotton,etc.	8 to10 minutes	
Ordinary clothes (underwear,etc)	7 minutes	NORMAL / DELICATE
Slightly soiled synthetic fiber	2 to 5 minutes	
100% wool,mixed wool knitting, thin synthetic fiber with tags indicating hand washing	2 to 5 minutes	

Detergent

6.5~7.2kg Capacity	
Amount of detergent	**Water level**
42 g	Low (42 ℓ)
52 g	Med (52 ℓ)
62 g	High (62 ℓ)
69 g	High 1 (69 ℓ)

The amount of detergent is average.
Follow the instruction detergent printed on the package for amount of detergent.
Choose the amount of detergent depending on the fabric type.

Spin dry time

Type of laundry	Time
Thin (synthetic fiber)	1 min.
Wool	1~2 min.
Cotton	3~5 min.
Thick (cotton)	5 min.
	10 min. (Air Turbo)

[INDUS2]WT727-03218A_EN.indd 8 2012-07-11 2:42:16

maintenance

WHEN YOU LOAD THE LAUNDRY INTO THE SPIN BASKET.

Press the laundry evenly and put the safety cover into the spin basket drum as shown in the figure.

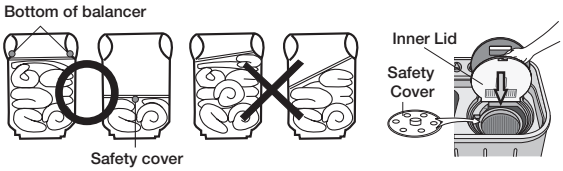

troubleshooting

TROUBLE	CHECK POINT
The washing machine does not work.	Check that the power cord is connected to a power outlet well. Power stoppage?
Clothes does not move freely.	Is the laundry overloaded?
Incomplete spinning. (Severe vibration or unbalance.)	Are the laundry arranged evenly? ➲ See “When you load...” on page 9.
Water does not drain.	Be sure lay the drain hose down. ➲ See page 3.
The spin dryer basket does not run.	Is the spin dryer lid closed completely? Are laundry (socks,etc.) falling out of the spin dryer basket and clinging to the axle?
The water drains out immediately.	Is the Drain Selector set to drain? Is the drain hose clogged with scrap? ➲ Hang up drain hose over the drain hose hook. Half fill the wash tub with the water and try for drain again. (Scrab will be removed by water drain pressure.)
Pulsator not moving.	• Although the machine may stay still, maximum 5 minutes. If the WASH TIMER indicates in excess of 15 minutes. It is just in the process of soaking and not a breakdown. • Check the knob position. It should not be in ‘No Work’ zone.
Spin Basket not moving	• Check the knob position. It should not be in ‘No Work’ zone. 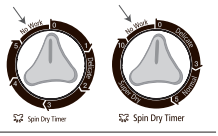

specifications

MODEL	WT727Q, WT725Q, WT657Q, WT655Q
DIMENSIONS (W x D x H)mm	(W)800 x (D)502 x (H)935
WATER PRESSURE	0.05~0.3 MPa 0.5 ~ 3.0 kg·f/cm^2
WEIGHT	24.5 kg
STANDARD QUANTITY OF WATER	69 ℓ
RATING TIME	Washing 1 Hour / Spinning 15 minutes

[INDUS2]WT727-03218A_EN.indd 9 2012-07-11 2:42:17

memo

[INDUS2]WT727-03218A_EN.indd 10 2012-07-11 2:42:17

memo

[INDUS2]WT727-03218A_EN.indd 11 2012-07-11 2:42:17

QUESTIONS OR COMMENTS?

Country	CALL	OR VISIT US ONLINE AT
AUSTRALIA	1300 362 603	www.samsung.com
INDIA	1800 1100 11 3030 8282 1800 3000 8282 1800 266 8282	www.samsung.com
MALAYSIA	1800-88-9999	www.samsung.com
PHILIPPINES	1-800-10-SAMSUNG(726-7864) for PLDT 1-800-3-SAMSUNG(726-7864) for Digitel 1-800-8-SAMSUNG(726-7864) for Globe 02-5805777	www.samsung.com
RUSSIA	8-800-555-55-55	www.samsung.com
SINGAPORE	1800-SAMSUNG(726-7864)	www.samsung.com
SOUTH AFRICA	0860-SAMSUNG(726-7864)	www.samsung.com
VIETNAM	1 800 588 889	www.samsung.com

Code No. DC68-03218A_EN

[INDUS2]WT727-03218A_EN.indd 12 2012-07-11 2:42:17

WT727Q
WT725Q
WT657Q
WT655Q

वाशिंग मशीन

उपयोक्ता पुस्तिका

संभावनाओं की कल्पना करें

सैमसंग का उत्पाद खरीदने के लिए धन्यवाद।
और अधिक सम्पूर्ण सेवा के लिए, कृपया अपने
उत्पाद को यहां रजिस्टर (पंजीकृत) करें

www.samsung.com/register

SAMSUNG

विषय सूची

विशेषताएँ 2
सुरक्षा निर्देश. 2
सावधानियाँ. 2
चलाते समय सावधानियाँ 3
पार्ट्स का विवरण. 4
कंट्रोल पैनल. 5
इंस्टालेशन. 6
पर्यावरण. 6
इनलेट हौज जोड़ना. 6
मशीन की सफाई 6
लिंट फिल्टर की सफाई 6
वाश टब की सफाई. 6
धुलाई प्रक्रिया 6
धुलाई. 6
सुखाने के लिए घुमाना. 7
खंगालना. 7
पानी डालते हुए खंगालना 8
अतिरिक्त रूप से खंगालना 8
लांड्री निर्देशिका 8
रखरखाव 9
समस्या समाधान 9
विशिष्ट विवरण. 9

WEEE चिह्न के बारे में निर्देश

इस उत्पाद का उपयुक्त निपटान (खराब इलेक्ट्रिक तथा इलेक्ट्रॉनिक उपकरण)



उत्पाद, एक्सेसरीज़ या साहित्य पर इस तरह का चिह्न यह संकेत करता है कि उत्पाद और इसकी इलेक्ट्रोनिक एक्सेसरीज़ को खराब होने के बाद अन्य घरेलू कचरे के साथ नहीं फेंका जाना चाहिए। अनियंत्रित कचरा निपटान से पर्यावरण या मानव स्वास्थ्य को होने वाली संभावित हानि को रोकने के लिए, कृपया इन वस्तुओं को अन्य प्रकार के कचरे से अलग करें और भौतिक संसाधनों के स्थाई पुनउपयोग को प्रोत्साहित करने के लिए उनका पुनर्चक्रण करें।

सुरक्षित निपटान और पुनचक्रीकरण के बारे में और अधिक जानकारी के लिए हमारी वेबसाइट www.samsung.com पर जाएँ या हमारे हेल्पलाइन नंबरों 1800 1100 11, 3030 8282, 1800 3000 8282, 1800 266 8282 पर सम्पर्क करें।

विशेषताएँ

- **डबल स्टॉर्म पल्सेटर (विकल्प)**
  - आंतरिक व बाह्य ब्लेड को विभिन्न गतियों पर घुमा कर, पानी की दो शक्तिशाली धाराएं उत्पन्न की जाती हैं जो सुनिश्चित करती हैं कि पारम्परिक मशीन की तुलना में कपड़े कम नुक्सान के साथ साफ हों। डबल स्टार्म जैसी जल धाराएं अनावश्यक अंशों को कम करते हुए धुलाई व खंगालने की ताकत को बढ़ाती हैं और लांड्री (कपड़ों) को मरोड़े या बांधे बिना आपके उत्कृष्ट कपड़ों के लिए टिकाऊपन व विश्वसनीयता उत्पन्न करते हैं।
- **एयर टर्बो ड्राइंग सिस्टम**
  - एयर टर्बो प्रौद्योगिकी रगड़ और तेज़ी के साथ घूमती है और आपको कपड़े सुखाने में कम समय लगता है।
  - समय बचाने वाला एयर टर्बो आपका समय बचाते हुए यह सुनिश्चित करता है कि आपके कपड़े 30–40 प्रतिशत तेज़ी से सूखें। विशेष रूप से बरसात और अधिक नमी वाले मौसम में, भारी जीन्स, भारी स्वेटरों और मोटे कम्बलों को पूरी तरह सूखने में कई दिन लगते हैं, इससे अधिक तेज़ी से सूखते हैं।
- **पारदर्शी या ट्रांसपेरेंट विंडो (विकल्प)**
  - यह पारदर्शी विंडो एक नई अवधारणा है जो मशीन चलने के दौरान उपयोक्ताओं की उत्सुकता को शांत करती है। मशीन चलाते समय, वाशिंग मशीन के अंदर धुलते कपड़ों की जांच इस पारदर्शी विंडो में से देख कर जांची जा सकती है।

सुरक्षा निर्देश

- सुरक्षापूर्ण उपयुक्त उपयोग में मदद करते हुए, अप्रत्याशित खतरे और नुक्सान से बचने के लिए सुरक्षा चेतावनियों और सावधानियों का पालन करें।

चेतावनियाँ

- **सुनिश्चित कर लें कि वाशिंग मशीन की अर्थिंग की गई है।**
  
  बिजली के झटके से बचने के लिए, ग्राऊंड कनैक्शन के लिए धातु के पाइप का प्रयोग करें। लेकिन, वाशिंग मशीन की ग्रांऊंडिंग गैस के पाइपों या टेलीफोन के तारों के साथ न करें ताकि विस्फोट या बिजली गिरने के खतरों से बचा जा सके।
- **जब स्पिन ड्रायर बास्केट घूम रही हो तो अपने हाथ स्पिन ड्रायर में न डालें।**

  आपकी उंगलियां घूमते हुए कपड़ों में फंस सकती हैं और चोट लग सकती है।
- **बच्चों को कभी वाशिंग मशीन न चलाने दें और न ही इसके साथ खेलने दें।**

  वाशिंग मशीन चलाते हुए बच्चे दुर्घटनावश वाशिंग टब में गिर सकते हैं।
- **(कृप्या वाशिंग मशीन या उसके ढक्कन पर नही चढे EZ ट्रे या सुखाने वालाढक्कन धोए।)**

- **जब वाशिंग मशीन चल रही हो तो निम्नलिखित चेतावनियों का पालन करें।**

जब ईजेड वाश ट्रे एक किनारे से दूसरे किनारे तक खिसकाया जाता है तो ईजेड वाश ट्रे वाशिंग मशीन के ऊपर से वाश टब में गिर सकती है।

- **उपयोग न किए जाते समय पॉवर कार्ड को बिजली की सप्लाई में से निकाल दें।**
- **जब वाशिंग मशीन को कार्पेटयुक्त¶ykj पर इंस्टाल किया जाता है तो हवा निकलने के छिद्रों को कार्पेटिंग करके बंद न करें।**
- **यदि सप्लाई की तार क्षतिग्रस्त हो जाती है, तो इसके स्थान पर इसके निर्माता, सर्विस एजेंट या किसी समकक्ष योग्य व्यक्ति से ही तार बदलवाएं ताकि किसी तरह की दुर्घटना से बचा जा सके।**
- **अतिरिक्त पानी भरने या नुक्सान से बचने के लिए, इस उपकरण में अपने सामने केवल पानी की सामान्य आपूर्ति से ही पानी भरें।**
- **बेस में लगे हवा के छिद्रो वाली वाशिंग मशीनों में, कार्पेट इन छिद्रों के रास्ते में नहीं आना चाहिए।**
- **अपनी वाशिंग मशीन में बिजली की सप्लाई के लिए, एडॉप्टर या एक्सटेंशन कॉर्ड का इस्तेमाल न करें।**
- **यह उपकरण कम शारीरिक, संवेदी या मानसिक क्षमताओं या अनुभव ओर ज्ञान की कमी वाले लोगों (बच्चों सहित) के उपयोग के लिए नहीं है, बशर्ते उन्हें उनकी सुरक्षा के लिए जिम्मेदार व्यक्ति द्वारा संबंधित मशीन के उपयोग के लिए निगरानी व निर्देश न दिए गए हों।**

⚠ चलाते समय सावधानियाँ

- **अत्यधिक गर्म पानी (500 से. या अधिक) का प्रयोग न करें।**
  प्लास्टिक के पार्ट्स विकृत या क्षतिग्रस्त हो सकते हैं। इसके अलावा कपड़े भी विकृत या बदरंग हो सकते हैं।
- **धोने से पहले सभी जेबों की जांच कर लें**
  यदि जेबों में कील या पिन रह जाती हैं तो इनसे वाशिंग मशीन या कपड़े क्षतिग्रस्त हो सकते हैं।
- **यदि पानी का प्रैशर बहुत ज्यादा है तो पानी के नल को बंद कर दें।**
- **पनी की बौछारों से बचने के लिए वाश टब के ढक्कन को बंद कर दें।**
- **कभी भी कंट्रोल पैनल पर पानी न डालें।**
- जेबों में से व्यक्तिगत सामान निकाल लें।



चेतावनी ⚠ जेबों की जांच करें! हेयरपिन और सिक्के कपडों और वाशिंग मशीन को नुक्सान पहुंचाते हैं। जबों की जांच अवश्य करें।

- **ईजेड वाश ट्रे पर केवल धुलने वाले कपड़े डालें। इस पर भारी कपड़े और सामान न रखें।**

- **ईजेड वाश ट्रे को वाशबोर्ड की तरह इस्तेमाल न करें।**

- **वाशिंग मशीन पर मोमबत्ती या गर्म वस्तुएं न रखें।**

- वाशिंग मशीन चलाते समय, ईजेड वाश ट्रे को साइड हुक पर टांग दें।

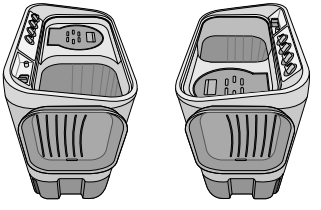

- **घुमाने से पहले लांड्री पर इनर कवर डालना याद रखें।**
  इससे लांड्री बाहर निकलने और क्षतिग्रस्त होने से बचती है।

- **सुनिश्चित कर लें ड्रेन हौज (पाइप) नीचे की तरफ हो।**



- **ईजेड वाश ट्रे पर भारी कपड़े या वनज से यह यह मशीन के साथ उलझ सकती है और वाशिंग मशीन से बाहर गिर सकती है।**
  ईजेड वाशिंग मशीन को ओवरलोड न करें।
- **नॉब्स को न खींचें। नॉब्स को पैनल के बाहर नहीं आ सकती।**

पार्ट्स का विवरण

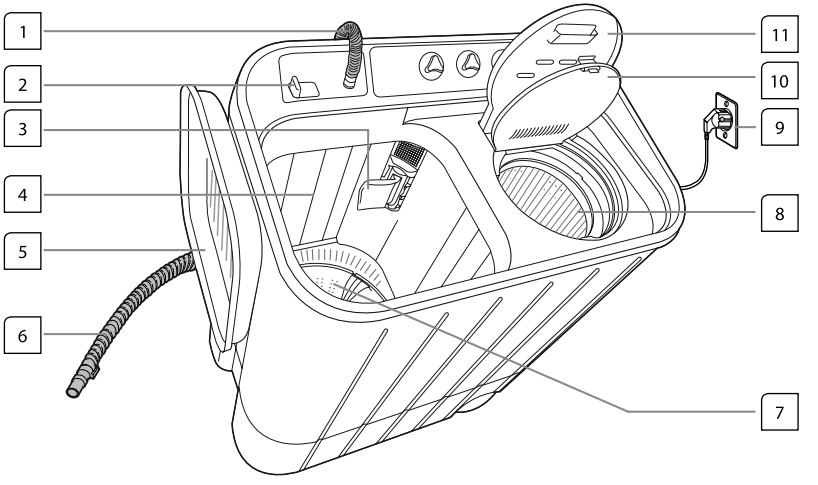

1	**इनलेट हौज**
2	**रिंज सलेक्टर लीवर**
3	**लिंट फिल्टर**
4	**वाश टब**
5	**वाश टब का ढक्कन (ईजेड वाशिंग ट्रे)** धुलाई और स्पिनिंग के दौरान सुनिश्चित कर लें कि ढक्कन बंद हो।
6	**वाटर ड्रेन हौज़**
7	**पल्सेटर**
8	**स्पिन ड्रायर बास्केट**
9	**पॉवर कॉर्ड** (हो सकता है प्लग की आकृति इस ड्रांइग से मेल न खाती हो)
10	**इनी लिड (अंदरूनी ढक्कन)**
11	**स्पिन ड्रायर लिड** स्पिन बास्केट के घूमते समय, जब आप इस ढक्कन को खोलते हैं तो ब्रेक सिस्टम से इसका घूमना रूक जाएगा।

कंट्रोल पैनल

WT727Q

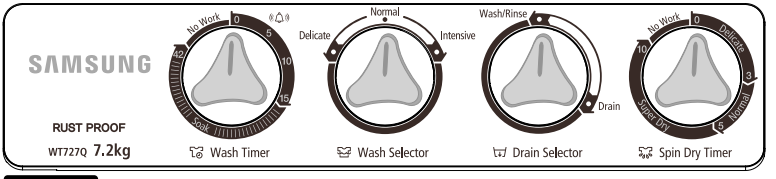

WT725Q

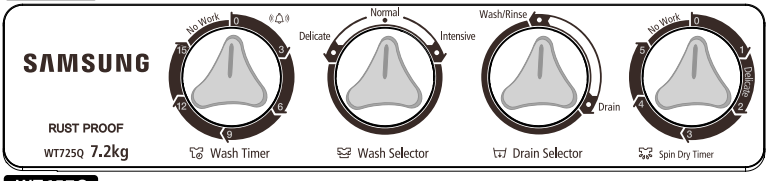

WT657Q

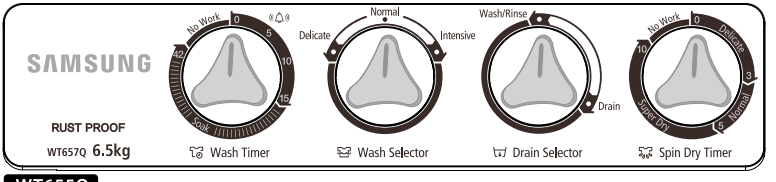

WT655Q

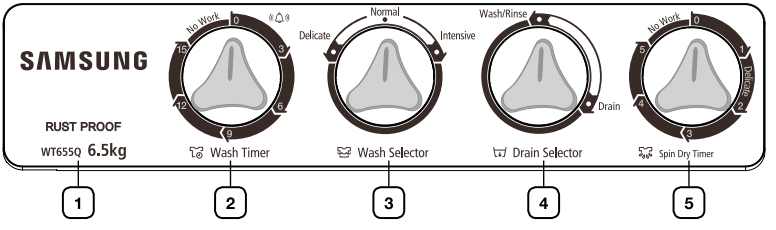

1	टॉप–कवर, बॉडी और बेस 'जंग रोधी' (रस्ट प्रूफ) हैं	किसी धातु के फ्रेम का उपयोग नहीं किया गया। जंग से मुक्त।
2	वाश टाइमर	इसे धुलाई का समय निर्धारित करने के लिए प्रयोग किया जाता है 1–15 मिनट (विकल्प) 1–42 मिनट (विकल्प)
3	वाश सलेक्टर	यह धुलाई की क्रिया के चयन के लिए प्रयोग किया जाता है।
4	ड्रेन सलेक्टर	इसका प्रयोग धुलाई/खंगालने या पानी निकालने के लिए किया जाता है।
5	स्पिन ड्राई टाइमर	इसका प्रयोग स्पिन टाइम के निर्धारण के लिए किया जाता है 1–5 मिनट (विकल्प) 1–10 मिनट (विकल्प)
	*वाटर सलेक्टर	धुलाई के दौरान, धोने के लिए, लीवर रिंज सलेक्टर चुनें। स्पिन रिंजिंग (घुमा कर खंगालने) के दौरान घुमाने के लिए वाटर सलेक्टर नॉब को चुनें।

इंस्टालेशन

वातावरण

- **मशीन को कैसे हिलाएं–डुलाएं**
  मशीन को आसानी से इधर उधर ले जाने के लिए इसमें पहिए लगे हैं।
  - चित्र में दिखाए गए तरीके से मशीन को मज़बूती से पकड़ें।

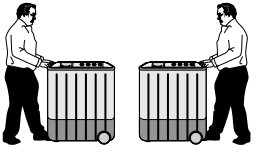

जब मशीन लोडेड हो तो मशीन को न घुमाएं।

- **कुछ स्थान छोड़ें।**
  वाशिंग मशीन और दीवार के बीच में कम से कम 15 से.मी. की दूरी रखें।
- **वाशिंग मशीन को ठोस समतल स्थान पर रखें।**
  यदि वाशिंग मशीन को किसी असमतल या कमज़ोर स्थान पर रखा जाता है, तो शोर या कंपन हो सकता है। (2° तक की अनुमति है)
- **कभी भी वाशिंग मशीन को पानी के नज़दीक इंस्टाल न करें।**
  वाशिंग मशीन को भापयुक्त कमरों या ऐसे स्थानों पर जहां वाशिंग मशीनों पर सीधी बरसात पड़ सकती हो, में न रखें। नमी से इलेक्ट्रिकल इंसुलेशन खत्म हो सकता है और बिजली का झटका लग सकता है।
- **सीधी धूप या गर्म उपकरणों से बचें।**
  चूंकि प्लास्टिक और इलेक्ट्रिकल पुर्जे सीधी गर्मी से प्रभावित होते हैं, इसलिए वाशिंग मशीन को कभी भी हीटर, बॉयलर आदि के निकट न रखें। सीधी धूप के नीचे न रखें।

ड्रेन पाइप को जोड़ना

ड्रेन पाइप लगाएं ओर इसे दिखाए गए तीर के निशान की दिशा में कस कर लगा दें।

- इसे थोड़ा जोर लगा कर ड्रेन आऊटलेट (पानी निकलने के स्थान) की तरफ धकेलें।
- ड्रेन पाइप को खींच कर देख लें कि यह बाहर तो नहीं निकल रहा।

इनलेट हौज को जोड़ना



(इनलेइ हौज को वाशिंग मशीन में जोड़ें)

(इनलेट हौज को नल से जोड़ें)

मशीन की सफाई

लिंट फिल्टर की सफाई

यदि धुलाई पूरी करने के बाद, लिंट फिल्टर में मैल भर जाती है तो चित्र में दिखाए गए तरीके से (1) को नीचे धकेल कर (2) को बाहर खींचें।

एकत्रित कचरे को निकालें और फिल्टर की जाली को धो दें।

वाश टब की सफाई

केबिनेट और ऑपरेशन पैनल पर लगे धब्बों कों मुलायम कपड़े से साफ कर दें।

बेंज़ीन, थनर, क्लीनज़र या मोम का इस्तेमाल न करें और न ही वाशिंग मशीन को ब्रश से रगड़ें। इससे पेंट की गई सतहों और प्लास्टिक पाट्र्स को नुक्सान पहुंच सकता है।

धुलाई प्रक्रिया

धुलाई

1. धुलाई षुरू करने से पहले, निम्नलिखित की जांच करें;
   - पानी की इनलेट हौज को जोड़ें और पानी का नल चलाएं।
   - पॉवर कॉर्ड को पावर सप्लाई आऊटलेट से जोड़ें
   - ड्रेन हौज (A) को नीचे की तरफ लगे सिंकहोल से जोड़ें।



2. वाश सलेक्टर नॉब को वांछित मोड पर सैट करें।

3. ड्रेन सलेक्टर नॉब को 'वाश.रिंज' (WASH.RINSE) पर सैट करें।

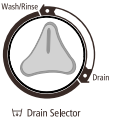

4. धुलाई के लिए लीवर रिंज सलेक्टर को सैट करें।

वाश स्पिन

5. लांड्री को वाश टब में डालें।

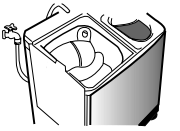

6. वाश टब में पानी भरें और डिटर्जेंट डालें।

7. वाश टाइमर को सैट करें।

वाश टाइमर को 1–15 मिनट (विकल्प) पर सैट करें
वाश टाइमर को 1–42 मिनट (विकल्प) पर सैट करें
(सोक या भिगोने की प्रक्रिया के लिए वाश टाइमर को 15 से 42 मिनट के बीच किसी बिंदु पर सैट करें)।

सोक फंक्शन (विकल्प)

यदि वाश टाइमर को ''15'' से ''42'' के बीच किसी बिंदु पर सैट किया जा ता है तो सोक (26.5 मिनट) पूरे होने के बाद वाशिंग मशीन धुलाई (15 मिनट) शुरू कर देती है।
सोक फंक्शन (26.5 मिनट) फिर से इसी चक्र को दोहराता है जो धुलाई पर 1.5–2.0 मिनट बाद होता है।
जिसमें घुमाना और 5 मिनट की रेस्टिंग (4 बार) षामिल होती है।

8. धुलाई के बाद, पानी निकालने के लिए ड्रेन सलेक्टर नॉब को ड्रेन (DRAIN) पर सैट करें।

सुखाने के लिए घुमाना

1. कपड़ों को स्पिन बास्केट में डालें और कपड़ों को समतल तरीके से लगाएं।

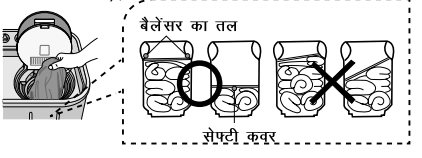

2. सुनिश्चित कर लें कि सेफ्टी कवर लगा हो और अंदरूनी ढक्कन बंद हो।

3. स्पिन ड्रायर के ढक्कन को बंद करें।



4. स्पिन ड्रायर टाइमर को 1–10 मिनट पर सैट करें।

1–5 मिनट स्पिन ड्रायर टाइमर (विकल्प)

1–10 मिनट स्पिन ड्रायर टाइमर (विकल्प)

5. अपूर्ण स्पिंनिंग (बहुत अधिक कंपन या असंतुलन) पृष्ठ 9 पर ''जब आप लोड करते हैं...'' देखें।

खंगालना

1. ड्रेन सलेक्टर नॉब को WASH RIINSE पर सैट करें।

2. पानी की पर्याप्त मात्रा डालें लेकिन यह वाशिंग टब के बाहर न आए।
3. वाश टाइमर को 2–3 मिनट पर सैट करें।

4. पानी निकालें। ड्रेन सलेक्टर नॉब को DRAIN पर सैट करें।

5. इस क्रिया को तब तक दोहराएं जब तक निकलने वाला पानी साफ न हो जाए। (2–3 बार)
6. सुनिश्चित कर लें कि ड्रेकन हौज नीचे की तरफ हो।

ओवर फ्लो रिंज

1. पानी डालना जारी रखें।

पानी का प्रैशर सुनिश्चित करें ताकि डाला गया पानी निकले हुए पानी से ज्यादा न हो।

2. वाश टाइमर को 6–8 मिनट पर सैट करें।

3. जैसे ही वाश टाइमर बंद हो जाए, पानी के नल को बंद कर दें।

4. ड्रेन सलेक्टर नॉब को DRAIN पर सैट करें।

अतिरिक्त खंगालना

कपड़े खंगालने के बाद, आप अधिक प्रभावी धुलाई के लिए इस विकल्प का चयन कर सकते हैं। (खंगालने के लिए केवल इसी का चयन न करें)।

1. कपड़ों को स्पिन बास्केट में समतल तरीके से डाल दें।

2. घुमायें SPIN (a) के लिए लीवर रिंज सलेक्टर और पानी निकालने DRAIN(b) के लिए ड्रेन सलेक्टर नॉब को सैट करें।

3. लगभग 1 मिनट तक पानी जाने दें। वाश टब में पानी के ओवरफ्लो से बचने के लिए पानी के प्रवाह को समायोजित करें।

4. पानी की सप्लाई रोकने के बाद, कपड़ो को सेफ्टी कवर से ढक दें ओर अंदर वाले ढक्कन को बंद कर दें।

5. स्पिन ड्रायर लिड को बंद कर दें।

6. स्पिन ड्रायर टाइमर को 2–3 मिनट पर सैट करें।

लांड्री निर्देशिका

धुलाई का समय

कपड़ों का प्रकार	धुलाई की अवधि	वाशिंग चयन
अत्यधिक मैले भारी कपड़े	10–15 मिनट	इंटेनशिव
लिनन, सूती आदि	8–10 मिनट	
सामान्य कपड़े (अंडरवियर आदि)	7 मिनट	सामान्य/ नाजुक
हल्के मैले सिंथेटिक कपड़ेद्ध	2–5 मिनट	
100% ऊनी, मिक्स्ड वूल से बुने, पतले सिंथेटिक कपड़े जिन पर हाथ से धोने का टैग लगा है	2–5 मिनट	

डिजर्टेंज

6.5–7.2 कि.ग्रा. क्षमता	
डिजर्टेंज की मात्रा	**पानी का स्तर**
42 ग्राम	कम (42 लीटर)
52 ग्राम	मध्यम (52 लीटर)
62 ग्राम	उच्च (62 लीटर)
69 ग्राम	उच्च (69 लीटर)

डिजर्टेंज की माचा औसत है।
डिजर्टेंज की मात्रा के लिए डिजर्टेंज पैकेज पर दिए गए निर्देश पढ़ें।
डिजर्टेंज की मात्रा कपड़े के प्रकार के आधार पर चुनें।

सुखाने के लिए घुमाने (स्पिन ड्राइ) की अवधि

कपड़ों का प्रकार	समय
पतले (सिंथेटिक फाइबर)	1 मिनट
ऊन	1–2 मिनट
सूती	3–5 मिनट
मोटे (सूती)	5 मिनट
	10 मिनट (एयर टर्बो)

जब आप स्पिन बास्केट में कपड़े डालते हैं।

कपड़ों को एक समान रूप से दबाएं असैर चित्र में दिखाए गए तरीके से स्पिन बास्केट ड्रम में सेफ्टी कवर लगाएं।

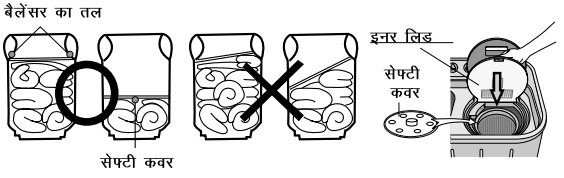

समस्या समाधान

समस्या	जांच बिंदु
वशिंग मशीन का काम न करना	जांच करें कि पॉवर कार्ड, बिजली के आऊटलेट के साथ ठीक तरीके से लगी हो। बिजली की रूकावट की जांच करें।
कपड़े आसानी से नहीं घूमते	क्या लांड्री में ज्यादा कपड़े हैं?
अपूर्ण स्पिनिंग (तेज़ कंपन या असंतुलन)	क्या कपड़ो को एकसमान तरीके से डाला गया है? पृष्ठ 9 पर ''जब आप कपड़े डालते हैं...'' देखें।
पानी बाहर नहीं निकलता	सुनिश्चित कर लें कि ड्रेन पाइप नीचे की तरफ है। पृष्ठ 3 देखें।
स्पिन ड्रायर बास्केट नहीं चलती	क्या स्पिन ड्रायर का ढक्कन पूरी तरह बंद है? क्या कपड़े (जुर्राबें आदि) स्पिन ड्रायर बास्केट से बाहर गिर रही हैं और एक्सल के साथ लिपट रही हैं?
पानी तुरंत बाहर आ जाता है।	क्या ड्रेन सलेक्टर को पानी निकालने के लिए सैट किया गया है? क्या ड्रेन पाइप में कचरा फंस गया है? ड्रेन हौज को, ड्रेन हौज के हुक पर लटकाएं। वाश टब को आधा पानी से भर लें और फिर से पानी निकालने की कोशिश करें। (पानी निकलने के दबाव से कचरा बाहर आ जाएगा)।
पलसेटर न चलना	• हालांकि मशीन अधिकतम 5 मिनट तक ऐसे ही रह सकती है। यदि वाश टाइमर 15 मिनट अधिक का संकेत करता है,तों यह सोकिंग (भिगोने) की प्रक्रिया में है और यह खराब नहीं है। • नॉब की स्थिति की जांच करें। यह नो वर्क 'NO WORK' क्षेत्र में नहीं होनी चाहिए। 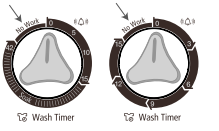
स्पिन बास्केट का न चलना	• नॉब की स्थिति की जांच करें। यह नो वर्क 'NO WORK' क्षेत्र में नहीं होनी चाहिए। 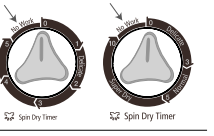

विशिष्ट ब्यौरे

मॉडल	WT727Q, WT725Q, WT657Q, WT655Q
परिमाण (चौड़ाईxगहराईxऊंचाई) मि.मी.	(चौड़ाई) 800 X (गहराई)502 X (ऊंचाई)935
पानी का प्रैशर	0.05–0.3 एमपीए 0.5–3.0 कि.ग्रा–फु./सेमी^{2}
वज़न	24.5 कि.ग्रा.
पानी की मानक मात्रा	69 लीटर
रेटिंग अवधि	धुलाई 1 घंटा/स्पिनिंग 15 मिनट

मेमो

मेमो

प्रश्न या टिप्पणियां?

देश	CALL	OR VISIT US ONLINE AT
आस्ट्रेलिया	1300 362 603	www.samsung.com
भारत	1800 1100 11 3030 8282 1800 3000 8282 1800 266 8282	www.samsung.com
मलेशिया	1800-88-9999	www.samsung.com
फिलीपीन्स	1-800-10-SAMSUNG(726-7864) for PLDT 1-800-3-SAMSUNG(726-7864) for Digitel 1-800-8-SAMSUNG(726-7864) for Globe 02-5805777	www.samsung.com
रूस	8-800-555-55-55	www.samsung.com
सिंगापुर	1800-SAMSUNG(726-7864)	www.samsung.com
दक्षिण अफ्रीका	0860-SAMSUNG(726-7864)	www.samsung.com
विएतनाम	1 800 588 889	www.samsung.com

कोड नं. DC68-03218A_HINDI